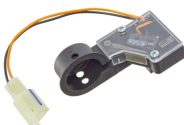


	MICROSWITCH SKU: 3414031 Microswitch Marcas EDESA, FAGOR	
	MICROSWITCH SKU: 3414032 Microswitch Marcas EDESA, FAGOR	
	INTERRUPTOR ON/OFF SKU: 3414100 Interruptor On/Off Marcas JUNKERS, NECKAR, VULCANO, ZEUS	
	MICROSWITCH SKU: 3414101 Microswitch Marcas JUNKERS, VULCANO	
	MICRO INTERRUPTOR SKU: 3414102 Micro interruptor Marcas JUNKERS, VULCANO, ZEUS	
	MICRO INTERRUPTOR SKU: 3414103 Micro interruptor Marcas JUNKERS, VULCANO, ZEUS	
	MICROINTERRUPTOR SKU: 3414104 Microinterruptor Marcas JUNKERS, VULCANO	
	MICROSWITCH SKU: 3414135 Microswitch Marcas VAILLANT	
	MICROSWITCH SKU: 3414136 Microswitch Marcas VAILLANT	
	MICRO INTERRUPTOR SKU: 3414138 Micro Interruptor Marcas VAILLANT	