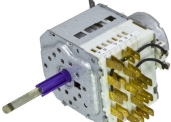 
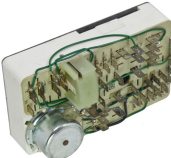 
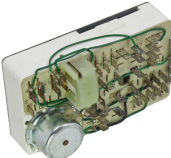 
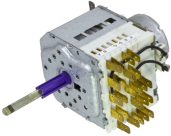 
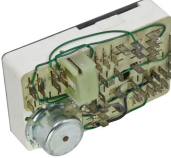 
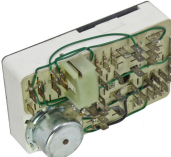 
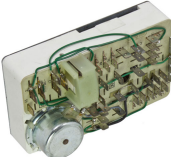 
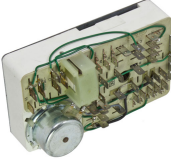 
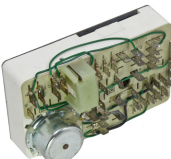 
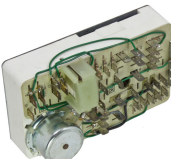 
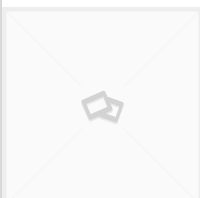 
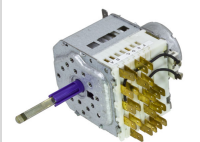 
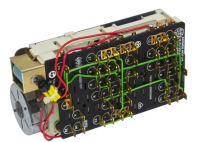 
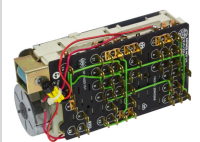 
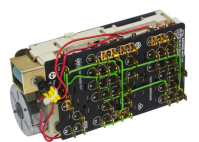 
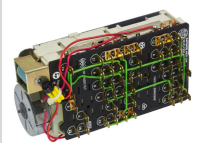 
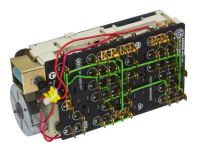 
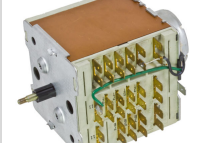 
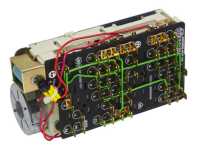 
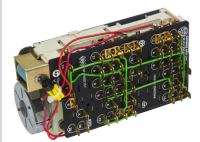 
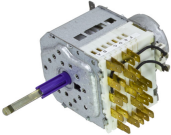 
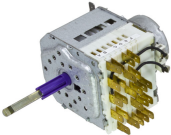 
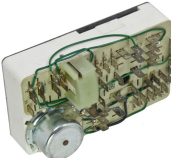 
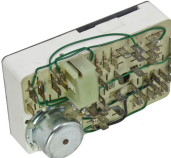 
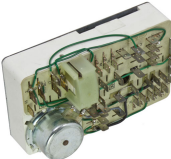 
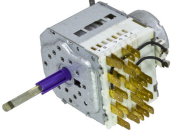 


 PROGRAMADOR EBS9797.01C SKU: 1179004 Programador EBS9797.01c EBS Marcas ARISTON	 PROGRAMADOR TD-02000102 SKU: 1179007 Programador TD-02000102 TD Marcas ARISTON, INDESIT
 PROGRAMADOR EC4668.01 SKU: 1179008 Programador EC4668.01 EATON Marcas ARISTON, INDESIT	 PROGRAMADOR EC4371.01E 04 SKU: 1179078 Programador EC4371.01e 04 EATON
 PROGRAMADOR TD-010046 SKU: 1179079 Programador TD-010046 TD Marcas BALAY	 PROGRAMADOR EC4273.01 SKU: 1179081 Programador EC4273.01 EATON Marcas BALAY
 PROGRAMADOR EC4226.01 SKU: 1179082 Programador EC4226.01 EATON Marcas BALAY	 PROGRAMADOR EC4392.01 SKU: 1179083 Programador EC4392.01 EATON Marcas BALAY
 PROGRAMADOR EBS9721.02 SKU: 1179110 Programador EBS9721.02 EBS Marcas CANDY	 PROGRAMADOR EC4195.01 SKU: 1179111 Programador EC4195.01 EATON Marcas CANDY
 PROGRAMADOR EC4196.01 SKU: 1179113 Programador EC4196.01 EATON Marcas CANDY	 PROGRAMADOR EC4348.01 SKU: 1179114 Programador EC4348.01 EATON Marcas CANDY

 PROGRAMADOR 0730/1/0.1 SKU: 1179115 Programador 0730/1/0.1 Marcas: CANDY	 PROGRAMADOR 0830/0/0.01 SKU: 1179116 Programador 0830/0/0.01 Marcas: CANDY
 PROGRAMADOR TD-010047 SKU: 1179119 Programador TD-010047 TD Marcas: CANDY, HOOVER	 PROGRAMADOR NP14400-57 SKU: 1179238 Programador NP14400-57 NP Marcas: EDESA, FAGOR
 PROGRAMADOR NP14400-37 SKU: 1179240 Programador NP14400-37 NP Marcas: FAGOR	 PROGRAMADOR NP14400-87 SKU: 1179241 Programador NP14400-87 NP Marcas: EDESA, FAGOR
 PROGRAMADOR NP14400-153A SKU: 1179242 Programador NP14400-153a NP Marcas: EDESA, FAGOR	 PROGRAMADOR NP14400-163C SKU: 1179243 Programador NP14400-163c NP Marcas: EDESA, FAGOR
 PROGRAMADOR ELBI 1736/1/4.03 SKU: 1179244 Programador ELBI 1736/1/4.03 ELBI Marcas: EDESA, FAGOR	 PROGRAMADOR NP14400-169C SKU: 1179245 Programador NP14400-169c NP Marcas: EDESA, FAGOR
 PROGRAMADOR NP14400-170C SKU: 1179246 Programador NP14400-170c NP Marcas: EDESA, FAGOR	 PROGRAMADOR ELBI 1853/1/4.03 SKU: 1179248 Programador ELBI 1853/1/4.03 TD Marcas: EDESA, FAGOR

 PROGRAMADOR TD-03007001 SKU: 1179249 Programador TD-03007001 TD Marcas EDESA, FAGOR	 PROGRAMADOR 09760102.00 SKU: 1179250 Programador 09760102.00 Marcas EDESA, FAGOR
 PROGRAMADOR TD-03003200 SKU: 1179251 Programador TD-03003200 TD Marcas EDESA, FAGOR	 PROGRAMADOR EC4138.01 SKU: 1179324 Programador EC4138.01 EATON Marcas INDESIT
 PROGRAMADOR EC4136.01 SKU: 1179325 Programador EC4136.01 EATON Marcas INDESIT	 PROGRAMADOR EO5030D SKU: 1179340 Programador EO5030D EO Marcas PHILIPS, WHIRLPOOL
 PROGRAMADOR EC4326.01 SKU: 1179341 Programador EC4326.01 EO Marcas PHILIPS, WHIRLPOOL	 PROGRAMADOR EO5051D SKU: 1179352 Programador EO5051D EO Marcas PHILIPS, WHIRLPOOL
 PROGRAMADOR EO5060D C SKU: 1179353 Programador EO5060D c EO Marcas PHILIPS, WHIRLPOOL	 PROGRAMADOR EC4649.01B SKU: 1179354 Programador EC4649.01b EATON Marcas PHILIPS, WHIRLPOOL
 PROGRAMADOR TD-020006 SKU: 1179400 Programador TD-020006 TD Marcas SINGER	