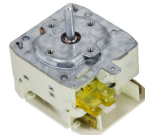 
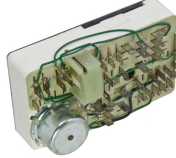 
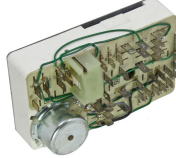 
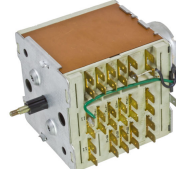 
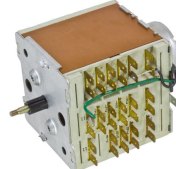 
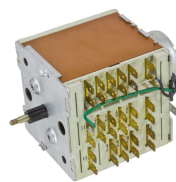 
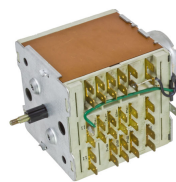 
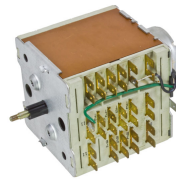 
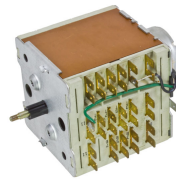 
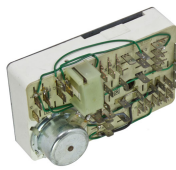 
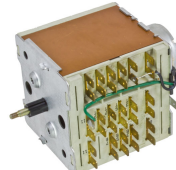 
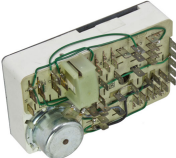 
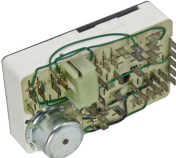 
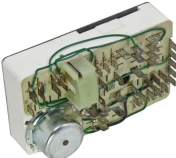 
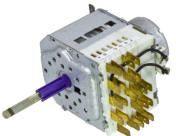 
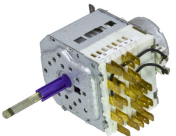 
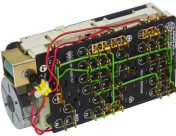 
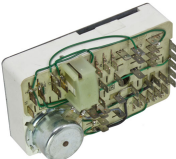 
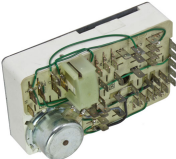 
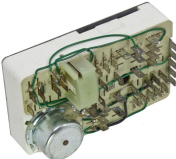 
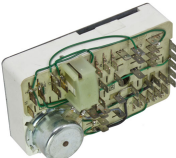 
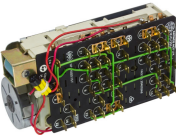 
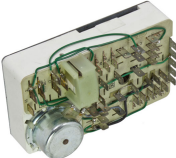 
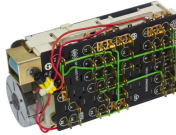 
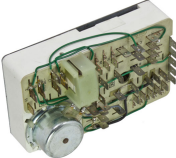 
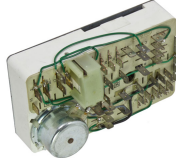 
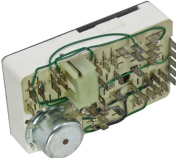 
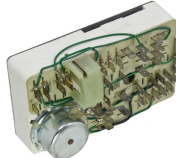 
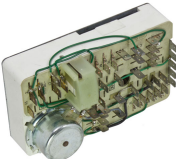 
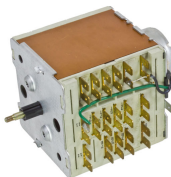 
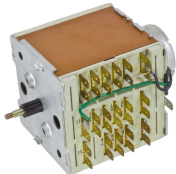 
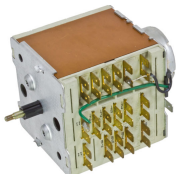 
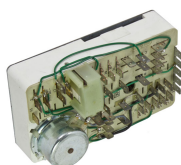 
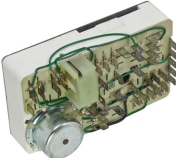 
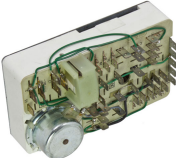 
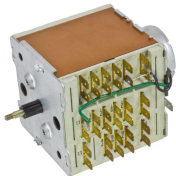 
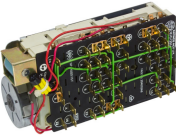 
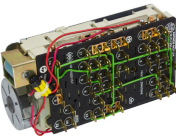 
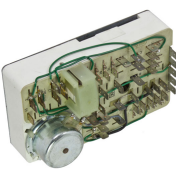 
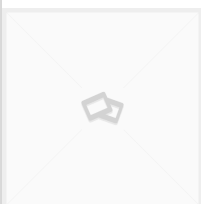 
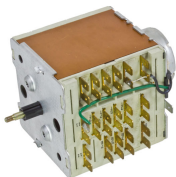 
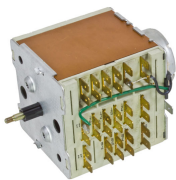 
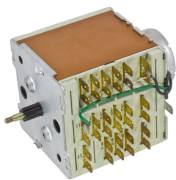 


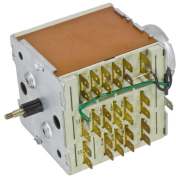 
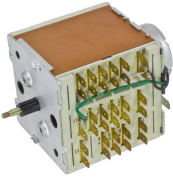 
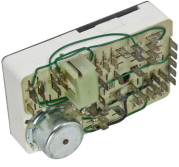 
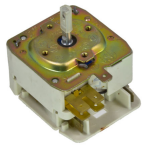 
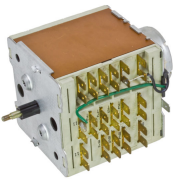 
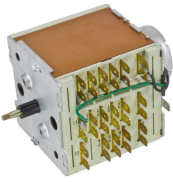 
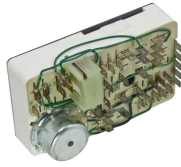 
 PROGRAMADOR EAS9313.01 HTTP://CMEDEIROS.PT/WP-CONTENT/UPLOADS/PRODUTOS/EATON.JPG SKU: 1178006 Programador EAS9313.01 EATON http://cmedeiros.pt/wp-content/uploads/PRODUTOS/EATON.JPG Marcas ARISTON	 PROGRAMADOR 900-910-9010 SKU: 1178010 Programador 900-910-9010 CROUSET Marcas ARISTON
 PROGRAMADOR EAS9174.01C SKU: 1178022 Programador EAS9174.01c EATON Marcas ARISTON	 PROGRAMADOR EAS9213A.04 SKU: 1178023 Programador EAS9213a.04 EATON Marcas ARISTON
 PROGRAMADOR ELBI 1008/1/2.04 SKU: 1178031 Programador ELBI 1008/1/2.04 ELBI Marcas ARISTON	 PROGRAMADOR ELBI 1024/7/2.07 SKU: 1178032 Programador ELBI 1024/7/2.07 ELBI Marcas ARISTON
 PROGRAMADOR ELBI 1065/1/1.13 SKU: 1178034 Programador ELBI 1065/1/1.13 ELBI Marcas ARISTON	 PROGRAMADOR ELBI 1038/1/1.02 SKU: 1178035 Programador ELBI 1038/1/1.02 ELBI Marcas ARISTON
 PROGRAMADOR ELBI 1128/0/2.04 SKU: 1178036 Programador ELBI 1128/0/2.04 ELBI Marcas ARISTON	 PROGRAMADOR ELBI 1148/0/1.04 SKU: 1178037 Programador ELBI 1148/0/1.04 ELBI Marcas ARISTON
 PROGRAMADOR EC4469.01C SKU: 1178040 Programador EC4469.01c EATON Marcas ARDO, MERLONI, PHILIPS, WHIRLPOOL	 PROGRAMADOR ELBI 1665/106/04 SKU: 1178044 Programador ELBI 1665/106/04 ELBI Marcas ARISTON

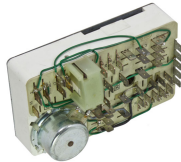 
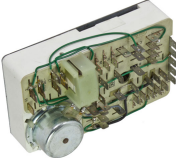 
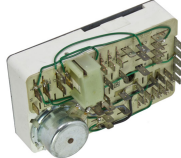 
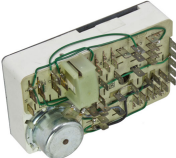 
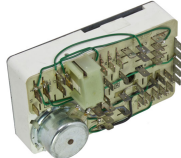 
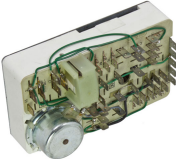 
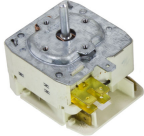 
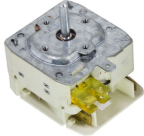 
 PROGRAMADOR EC4707.01D01 SKU: 1178047 Programador EC4707.01d01 EATON Marcas ARDO, MERLONI	 PROGRAMADOR EC4425.01C03 SKU: 1178048 Programador EC4425.01c03 EATON Marcas ARISTON
 PROGRAMADOR 07482004.02 SKU: 1178049 Programador 07482004.02 Marcas ARISTON	 PROGRAMADOR EC4446.01 SKU: 1178056 Programador EC4446.01 EATON Marcas BALAY
 PROGRAMADOR TD-01000500D SKU: 1178057 Programador TD-01000500D TD Marcas BALAY	 PROGRAMADOR TD-01000800 SKU: 1178059 Programador TD-01000800 TD Marcas BALAY
 PROGRAMADOR NP14400/198B SKU: 1178060 Programador NP14400/198b NP Marcas BALAY	 PROGRAMADOR EC4765.04 SKU: 1178065 Programador EC4765.04 EATON Marcas BALAY
 PROGRAMADOR EAS9177.03.05 SKU: 1178066 Programador EAS9177.03.05 EATON Marcas BALAY	 PROGRAMADOR EAS9275.08.03 SKU: 1178067 Programador EAS9275.08.03 EATON Marcas BALAY
 PROGRAMADOR EAS9177.04C SKU: 1178076 Programador EAS9177.04c EATON Marcas BALAY	 PROGRAMADOR NP14400/36A SKU: 1178088 Programador NP14400/36a NP Marcas BALAY

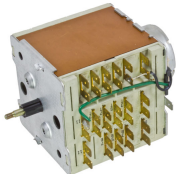 
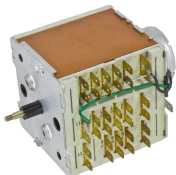 
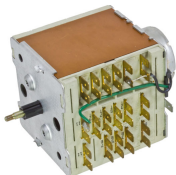 
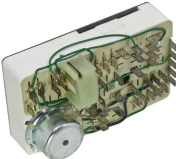 
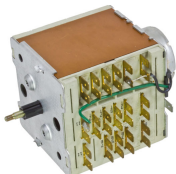 
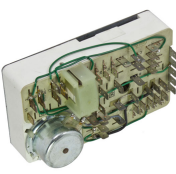 
 PROGRAMADOR EAS9275.06 SKU: 1178093 Programador EAS9275.06 EATON Marcas BALAY	 PROGRAMADOR NP14400-151E SKU: 1178094 Programador NP14400-151e NP Marcas BALAY
 PROGRAMADOR EC4335.03 SKU: 1178095 Programador EC4335.03 EATON Marcas BALAY	 PROGRAMADOR EC4325.02B SKU: 1178096 Programador EC4325.02b EATON Marcas BALAY
 PROGRAMADOR EC4334.01A SKU: 1178097 Programador EC4334.01a EATON Marcas BALAY	 PROGRAMADOR EC4325.01C SKU: 1178098 Programador EC4325.01c EATON Marcas BALAY
 PROGRAMADOR EC4765.01B SKU: 1178099 Programador EC4765.01b EATON Marcas BALAY	 PROGRAMADOR 35020004.05 SKU: 1178121 Programador 35020004.05 Marcas CANDY
 PROGRAMADOR EC4777.01B SKU: 1178122 Programador EC4777.01b EATON Marcas CANDY	 PROGRAMADOR ELBI 1417/01/00 SKU: 1178123 Programador ELBI 1417/01/00 ELBI Marcas CANDY
 PROGRAMADOR 900-914-3246 SKU: 1178124 Programador 900-914-3246 CROUSET Marcas CANDY	 PROGRAMADOR 900-914-3174 SKU: 1178125 Programador 900-914-3174 CROUSET Marcas CANDY

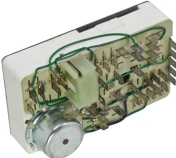 
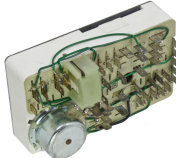 
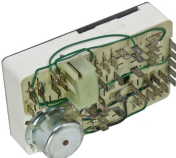 
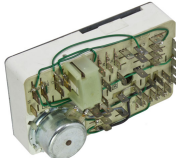 
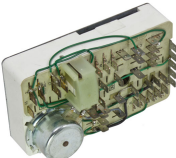 
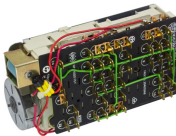 
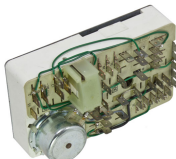 
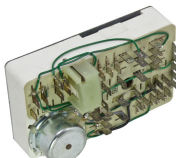 
 PROGRAMADOR ELBI 1107/2/1.06 SKU: 1178127 Programador ELBI 1107/2/1.06 ELBI Marcas CANDY	 PROGRAMADOR 900-914-3133 SKU: 1178128 Programador 900-914-3133 CROUSET Marcas CANDY
 PROGRAMADOR 900-914-3177 SKU: 1178129 Programador 900-914-3177 CROUSET Marcas CANDY	 PROGRAMADOR 900-914-3136 SKU: 1178145 Programador 900-914-3136 CROUSET Marcas CANDY
 PROGRAMADOR 900-912-182 SKU: 1178147 Programador 900-912-182 CROUSET Marcas CANDY	 PROGRAMADOR 900/907/3173 ELBI 1307/1/1.06 SKU: 1178149 Programador 900/907/3173 Elbi 1307/1/1.06 CROUSET Marcas CANDY
 PROGRAMADOR 900-907-3170 SKU: 1178151 Programador 900-907-3170 CROUSET Marcas CANDY	 PROGRAMADOR 900-914-3139 SKU: 1178152 Programador 900-914-3139 CROUSET Marcas CANDY
 PROGRAMADOR 900-910-3111 SKU: 1178156 Programador 900-910-3111 CROUSET Marcas CANDY, ZEROWATT	 PROGRAMADOR 2000-2008-3163 SKU: 1178166 Programador 2000-2008-3163 Marcas CANDY
 PROGRAMADOR ELBI 1410/3/2.01 SKU: 1178168 Programador ELBI 1410/3/2.01 ELBI Marcas CANDY, IBERNA	 PROGRAMADOR EC2001.01d SKU: 1178170 Programador EC2001.01d EATON Marcas CANDY

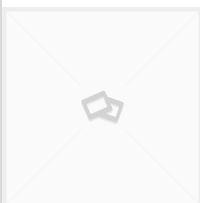 
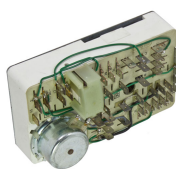 
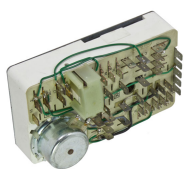 
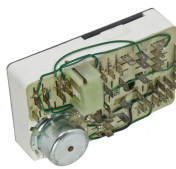 
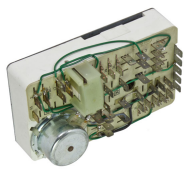 
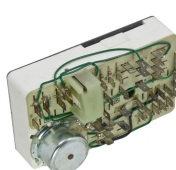 
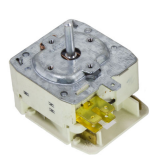 
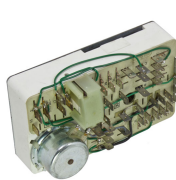 
 PROGRAMADOR EC4215.01B SKU: 1178172 Programador EC4215.01b EATON Marcas CANDY	 PROGRAMADOR EC 4333.02B SKU: 1178220 Programador EC 4333.02B EATON Marcas ELECTROLUX
 PROGRAMADOR ELBI 1157/0/1.01 SKU: 1178248 Programador ELBI 1157/0/1.01 ELBI Marcas EDESA, FAGOR	 PROGRAMADOR NP14500-15 SKU: 1178249 Programador NP14500-15 NP Marcas EDESA, FAGOR
 PROGRAMADOR NP14400-30D SKU: 1178252 Programador NP14400-30d NP Marcas EDESA, FAGOR	 PROGRAMADOR EC4362.02 SKU: 1178256 Programador EC4362.02 EATON Marcas EDESA, FAGOR
 PROGRAMADOR 07871000.00 SKU: 1178258 Programador 07871000.00 Marcas EDESA, FAGOR	 PROGRAMADOR TD-010026 SKU: 1178259 Programador TD-010026 TD Marcas EDESA, FAGOR
 PROGRAMADOR 0806/0./0.00 SKU: 1178260 Programador 0806/0./0.00 ELBI Marcas EDESA, FAGOR	 PROGRAMADOR ELBI 1282/0/1.01 SKU: 1178261 Programador ELBI 1282/0/1.01 ELBI Marcas EDESA, FAGOR
 PROGRAMADOR ELBI 1407/2/1.01 SKU: 1178307 Programador ELBI 1407/2/1.01 ELBI Marcas ARDO, HOOVER	 PROGRAMADOR ELBI 1225/1/1.01 SKU: 1178309 Programador ELBI 1225/1/1.01 ELBI Marcas ARDO, HOOVER

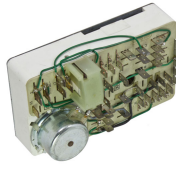 
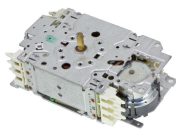 
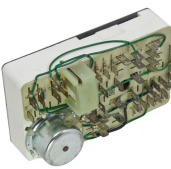 
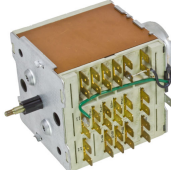 
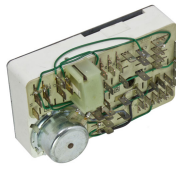 
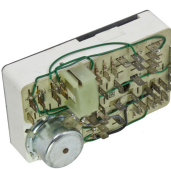 
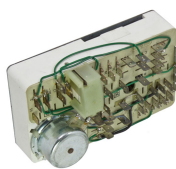 
 PROGRAMADOR 900-912-580 SKU: 1178310 Programador 900-912-580 CROUSET Marcas CANDY, HOOVER	 PROGRAMADOR ELBI 1044/1/2.08 SKU: 1178312 Programador ELBI 1044/1/2.08 ELBI Marcas ARDO, HOOVER
 PROGRAMADOR ELBI 1244/1/2.02 SKU: 1178313 Programador ELBI 1244/1/2.02 ELBI Marcas ARDO, HOOVER	 PROGRAMADOR ZBN8313 SKU: 1178314 Programador ZBN8313 ZBN Marcas HOOVER
 PROGRAMADOR EC4372.01 SKU: 1178315 Programador EC4372.01 EATON Marcas CANDY, HOOVER	 PROGRAMADOR SH1670A SKU: 1178317 Programador SH1670A SH Marcas HOOVER
 PROGRAMADOR ELBI 1135/1/1.05 SKU: 1178318 Programador ELBI 1135/1/1.05 ELBI Marcas CANDY, HOOVER	 PROGRAMADOR 900-914-7917 SKU: 1178319 Programador 900-914-7917 CROUSET Marcas CANDY, HOOVER
 PROGRAMADOR ELBI 1324/0/2.03 SKU: 1178323 Programador ELBI 1324/0/2.03 ELBI Marcas ARDO, HOOVER	 PROGRAMADOR ZBN8314.01E SKU: 1178324 Programador ZBN8314.01e ZBN Marcas ARDO, HOOVER
 PROGRAMADOR ZBN8314.03E SKU: 1178325 Programador ZBN8314.03e ZBN Marcas ARDO, HOOVER	 PROGRAMADOR EC4662.01E02 SKU: 1178326 Programador EC4662.01e02 EATON Marcas ARDO, HOOVER

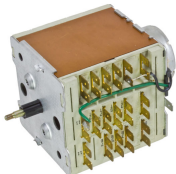 
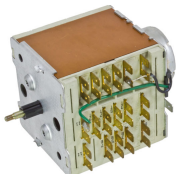 
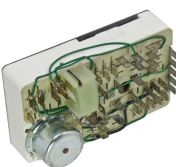 
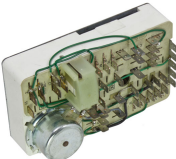 
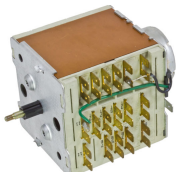 
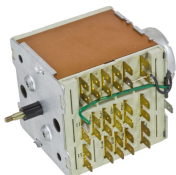 
 PROGRAMADOR CS1079D SKU: 1178329 Programador CS1079D CS Marcas PHILIPS, WHIRLPOOL	 PROGRAMADOR EC4203.01 SKU: 1178330 Programador EC4203.01 EATON Marcas PHILIPS, WHIRLPOOL
 PROGRAMADOR EC4795.01 SKU: 1178332 Programador EC4795.01 EATON Marcas PHILIPS, WHIRLPOOL	 PROGRAMADOR EC4534.01 SKU: 1178335 Programador EC4534.01 EATON Marcas PHILIPS, WHIRLPOOL
 PROGRAMADOR EAS9243.02C SKU: 1178336 Programador EAS9243.02c EATON Marcas PHILIPS, WHIRLPOOL	 PROGRAMADOR EC4526.02F09 SKU: 1178338 Programador EC4526.02f09 EATON Marcas PHILIPS, WHIRLPOOL
 PROGRAMADOR EC4522.01B03 SKU: 1178341 Programador EC4522.01b03 EATON Marcas PHILIPS, WHIRLPOOL	 PROGRAMADOR 900-914-1426 SKU: 1178343 Programador 900-914-1426 CROUSET Marcas PHILIPS, WHIRLPOOL
 PROGRAMADOR 900-914-1394 SKU: 1178344 Programador 900-914-1394 CROUSET Marcas PHILIPS, WHIRLPOOL	 PROGRAMADOR 900-914-7916 SKU: 1178347 Programador 900-914-7916 CROUSET Marcas PHILIPS, WHIRLPOOL
 PROGRAMADOR 900-914-1429 SKU: 1178348 Programador 900-914-1429 CROUSET Marcas PHILIPS, WHIRLPOOL	 PROGRAMADOR 900-914-1425 SKU: 1178349 Programador 900-914-1425 CROUSET Marcas PHILIPS, WHIRLPOOL

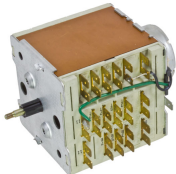 
 PROGRAMADOR ELBI 1240/0/1.06 SKU: 1178350 Programador ELBI 1240/0/1.06 ELBI Marcas PHILIPS, WHIRLPOOL	 PROGRAMADOR 900/914/1365 SKU: 1178352 Programador 900/914/1365 CROUSET
 PROGRAMADOR 900-914-1357 SKU: 1178359 Programador 900-914-1357 CROUSET Marcas PHILIPS, WHIRLPOOL	 PROGRAMADOR 900-912-1333 SKU: 1178361 Programador 900-912-1333 CROUSET Marcas PHILIPS, WHIRLPOOL
 PROGRAMADOR 900-914-1352 SKU: 1178364 Programador 900-914-1352 CROUSET Marcas PHILIPS, WHIRLPOOL	 PROGRAMADOR 900-914-1358 SKU: 1178369 Programador 900-914-1358 CROUSET Marcas PHILIPS, WHIRLPOOL
 PROGRAMADOR ELBI 1336/0/2.05 SKU: 1178377 Programador ELBI 1336/0/2.05 ELBI Marcas INDESIT	 PROGRAMADOR ELBI 1136/0/2.03 SKU: 1178378 Programador ELBI 1136/0/2.03 ELBI Marcas INDESIT
 PROGRAMADOR EC4684.01 SKU: 1178381 Programador EC4684.01 EATON Marcas INDESIT	 PROGRAMADOR 2000-2005-6561 SKU: 1178390 Programador 2000-2005-6561 Marcas GORENJE
 PROGRAMADOR ELBI 1858/2/5.06 SKU: 1178507 Programador ELBI 1858/2/5.06 ELBI Marcas NEWPOL	 PROGRAMADOR EC4412.02c SKU: 1178508 Programador EC4412.02c EATON Marcas NEWPOL

 PROGRAMADOR EC4236.01 SKU: 1178538 Programador EC4236.01 EATON Marcas NEWPOL	 PROGRAMADOR EC4236.02 SKU: 1178539 Programador EC4236.02 EATON Marcas
 PROGRAMADOR EC4413.01c SKU: 1178542 Programador EC4413.01c EATON Marcas NEWPOL	 PROGRAMADOR EC4423.01b SKU: 1178544 Programador EC4423.01b EATON Marcas NEWPOL
 PROGRAMADOR EAT8106.03 SKU: 1178566 Programador EAT8106.03 EATON Marcas OEIRAS	 PROGRAMADOR NP14400-159e SKU: 1178596 Programador NP14400-159e NP Marcas CANDY, OTSEIN
 PROGRAMADOR EBT9607.02D04 SKU: 1178609 Programador EBT9607.02d04 EBT Marcas PHILCO	 PROGRAMADOR EC4342.01B04 SKU: 1178613 Programador EC4342.01b04 EATON Marcas PHILCO
 PROGRAMADOR EBS9751.01 SKU: 1178614 Programador EBS9751.01 EBS Marcas PHILCO	 PROGRAMADOR EC4088.01H09 SKU: 1178620 Programador EC4088.01h09 EATON Marcas PHILCO
 PROGRAMADOR 2000-2006-0676 SKU: 1178621 Programador 2000-2006-0676 Marcas PHILCO	 PROGRAMADOR 2000-2006-0691 SKU: 1178622 Programador 2000-2006-0691 Marcas PHILCO

 PROGRAMADOR 2000-2006-0675 SKU: 1178623 Programador 2000-2006-0675 Marcas PHILCO	 PROGRAMADOR 2000-2006-0692 SKU: 1178624 Programador 2000-2006-0692 Marcas PHILCO
 PROGRAMADOR EC4088.07H09 SKU: 1178626 Programador EC4088.07h09 EATON Marcas PHILCO	 PROGRAMADOR EC4238.02 SKU: 1178631 Programador EC4238.02 EATON Marcas PHILCO
 PROGRAMADOR EC4449.01 SKU: 1178632 Programador EC4449.01 EATON Marcas PHILCO	 PROGRAMADOR EC4324.02 SKU: 1178633 Programador EC4324.02 EATON Marcas PHILCO
 PROGRAMADOR EC4238.01 SKU: 1178639 Programador EC4238.01 EATON Marcas PHILCO	 PROGRAMADOR 900-914-8857 SKU: 1178775 Programador 900-914-8857 CROUSET Marcas OCEAN, S. GIORGIO
 PROGRAMADOR ELBI 1216/1/1.04 SKU: 1178777 Programador ELBI 1216/1/1.04 ELBI Marcas OCEAN, S. GIORGIO	 PROGRAMADOR EAS9008.05C SKU: 1178782 Programador EAS9008.05c EATON Marcas OCEAN, S. GIORGIO
 PROGRAMADOR EAS9171.01 SKU: 1178783 Programador EAS9171.01 EATON Marcas OCEAN, S. GIORGIO	 PROGRAMADOR ELBI 1284/6/1.10 SKU: 1178787 Programador ELBI 1284/6/1.10 ELBI Marcas OCEAN, S. GIORGIO

 PROGRAMADOR EBS9770.08 SKU: 1178788 Programador EBS9770.08 EBS Marcas OCEAN, S. GIORGIO	 PROGRAMADOR EAS9333.11 SKU: 1178790 Programador EAS9333.11 EATON Marcas OCEAN, S. GIORGIO
 PROGRAMADOR 900-914-937/955 SKU: 1178806 Programador 900-914-937/955 CROUSET Marcas SILTAL	 PROGRAMADOR EBS9777.04 SKU: 1178807 Programador EBS9777.04 EBS Marcas SILTAL
 PROGRAMADOR EC4261.01 SKU: 1178809 Programador EC4261.01 EATON Marcas SILTAL	 PROGRAMADOR 2004-973-56XA SKU: 1178810 Programador 2004-973-56xa Marcas SILTAL
 PROGRAMADOR ELBI 0635/2/0.09 SKU: 1178811 Programador ELBI 0635/2/0.09 ELBI Marcas SILTAL	 PROGRAMADOR EC4261.03 SKU: 1178812 Programador EC4261.03 EATON Marcas SILTAL, TEKA
 PROGRAMADOR 2000-2005-0981 SKU: 1178813 Programador 2000-2005-0981 Marcas SILTAL, TEKA	 PROGRAMADOR 0635/3/0.09 SKU: 1178815 Programador 0635/3/0.09 Marcas SILTAL
 PROGRAMADOR EC4173.02 SKU: 1178857 Programador EC4173.02 EATON	 PROGRAMADOR EC4172.02B SKU: 1178858 Programador EC4172.02b EATON Marcas S. GIORGIO, SINGER

 PROGRAMADOR 900-912-479 SKU: 1178886 Programador 900-912-479 CROUSET Marcas: HOOVER, ZANUSSI	 PROGRAMADOR 900/912/576 SKU: 1178901 Programador 900/912/576 CROUSET
 PROGRAMADOR 900-914-755 SKU: 1178908 Programador 900-914-755 CROUSET Marcas: ZANUSSI	 PROGRAMADOR ELBI 1099/0/1.02 SKU: 1178910 Programador ELBI 1099/0/1.02 ELBI Marcas: ZANUSSI
 PROGRAMADOR ELBI 1009/1/2.08 SKU: 1178911 Programador ELBI 1009/1/2.08 ELBI Marcas: ZANUSSI	 PROGRAMADOR EC4178.01 SKU: 1178913 Programador EC4178.01 EATON Marcas: ZANUSSI
 PROGRAMADOR EC4333.01B03 SKU: 1178916 Programador EC4333.01b03 EATON Marcas: ZANUSSI	 PROGRAMADOR ELBI 1398/0/1.00 SKU: 1178918 Programador ELBI 1398/0/1.00 ELBI Marcas: ELECTROLUX, ZANUSSI
 PROGRAMADOR ELBI 1430/1/2.01 SKU: 1178919 Programador ELBI 1430/1/2.01 ELBI Marcas: ZANUSSI	 PROGRAMADOR EC4245.01D SKU: 1178921 Programador EC4245.01d EATON Marcas: ELECTROLUX, ZANUSSI
 PROGRAMADOR TMX88900040/022 SKU: 1178922 Programador TMX88900040/022 TMX Marcas: ELECTROLUX, ZANUSSI	 PROGRAMADOR 514000 SKU: 1178923 Programador 514000 Marcas: ELECTROLUX, ZANUSSI

 PROGRAMADOR ELBI 07052012.00 SKU: 1178925 Programador ELBI 07052012.00 ELBI Marcas ELECTROLUX, ZANUSSI	 PROGRAMADOR 07404012.00 SKU: 1178926 Programador 07404012.00 Marcas ELECTROLUX, ZANUSSI
---	--